


INSTALLATION MANUAL


 **DocciaBox**
ACQUISTA DIRETTAMENTE DALLA FABBRICA

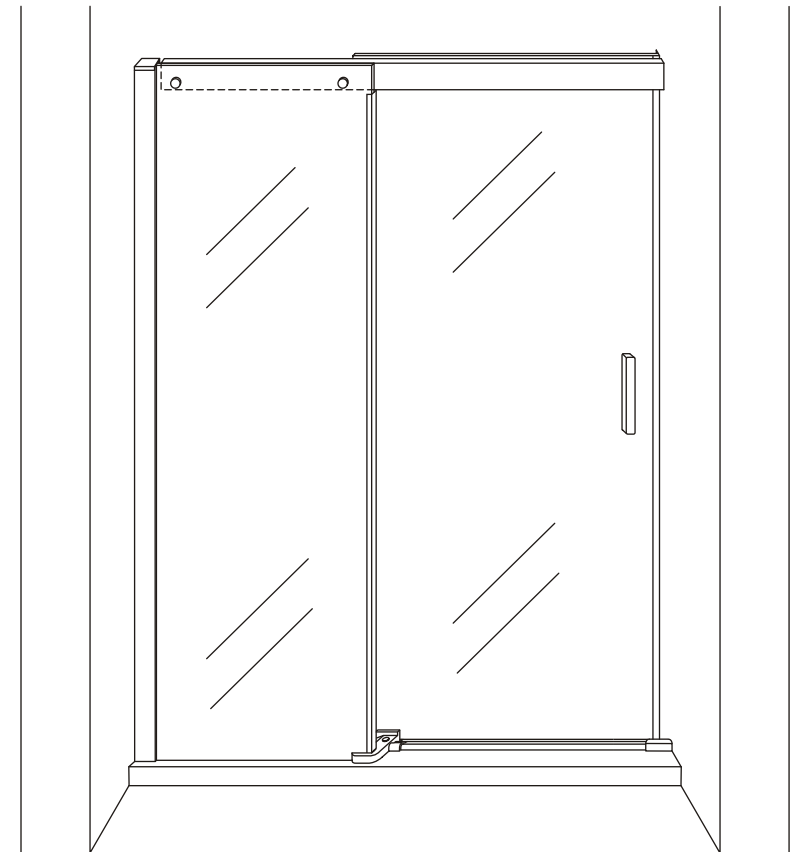


BL-P702

RoHS  **ISO9001:2000**


TOOL PICTURE

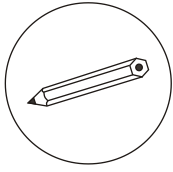


Pencil

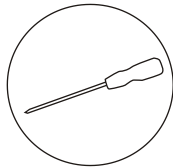


Cross screw driver

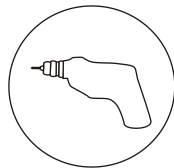


Drill machine (6mm)

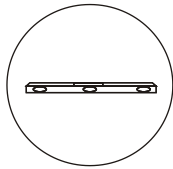

Level ruler


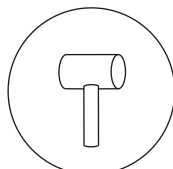


Rubber hammer

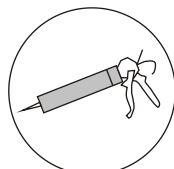


Silicon gel


Put the tray on the floor and make sure it is level with a level ruler .




Accessory list




Side cover




Wall profile




Glass




Glass




Screw
4x50




HGL-808




Tray




wheel




PJ-4706/
PJ-4707




PJ-4578




CT-8DST90




LS-1018




Glass screw



Expand tube




Screw
4x16




gasket




PJ-4012




PJ-4026




Screw
4x30




PJ-4608




PJ-4607




Aluminum
bottom bar




PJ-4702/
PJ-4703





LTL-954



PJ-4699


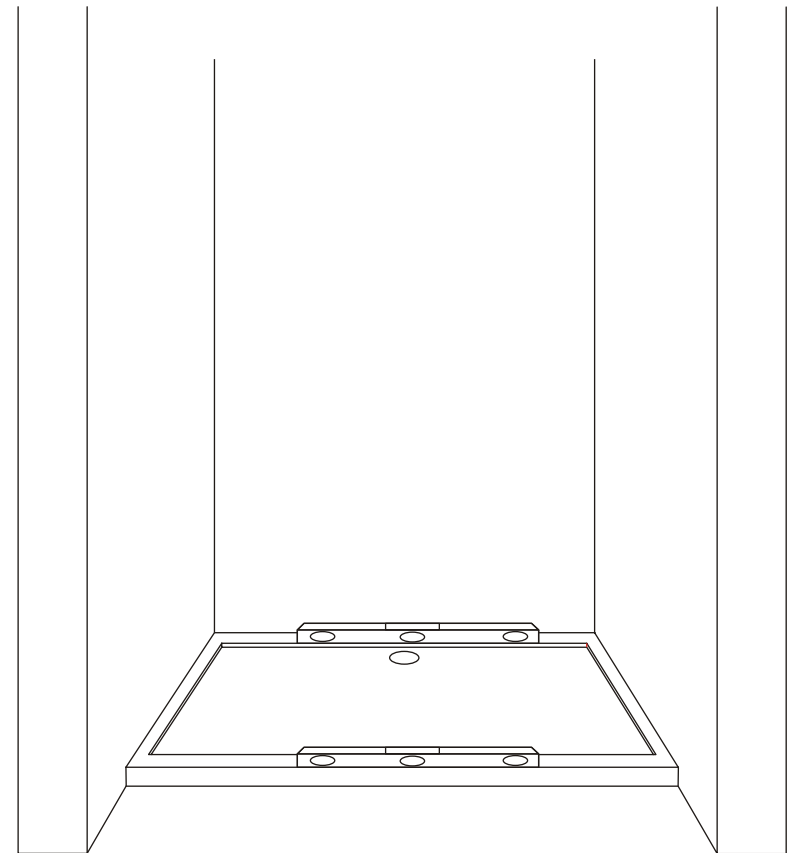


Install the wall aluminium profile.

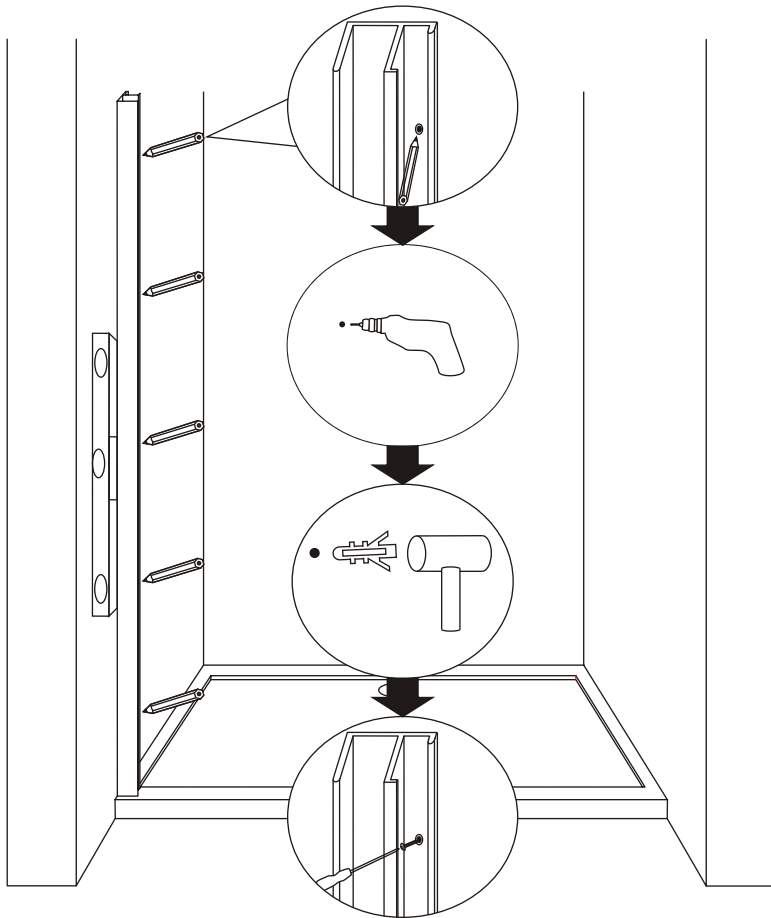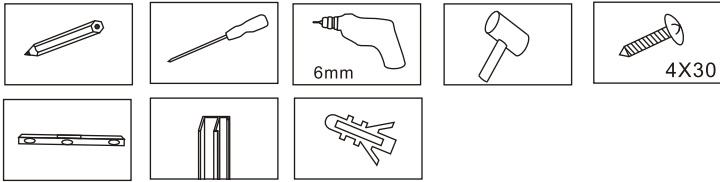


3

Insert the fixed glasses into the wall aluminum profile.

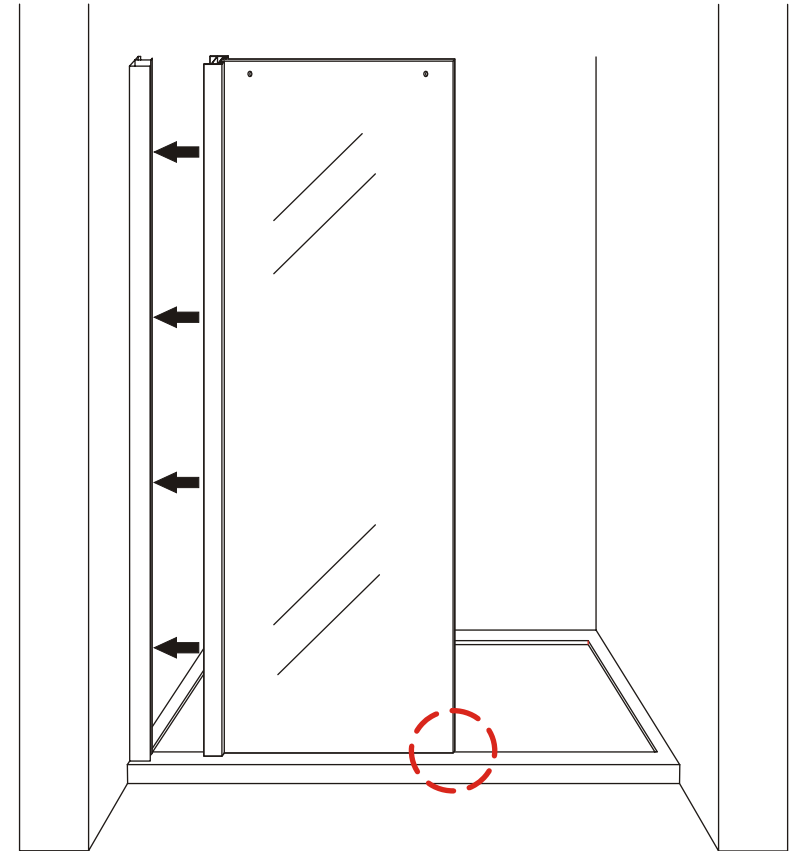



Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.




4

Install the connection guide support (Notice: First make sure the hole position on the wall and marked, the hole position to the tray is 1917mm, to the fixed door is 21mm).

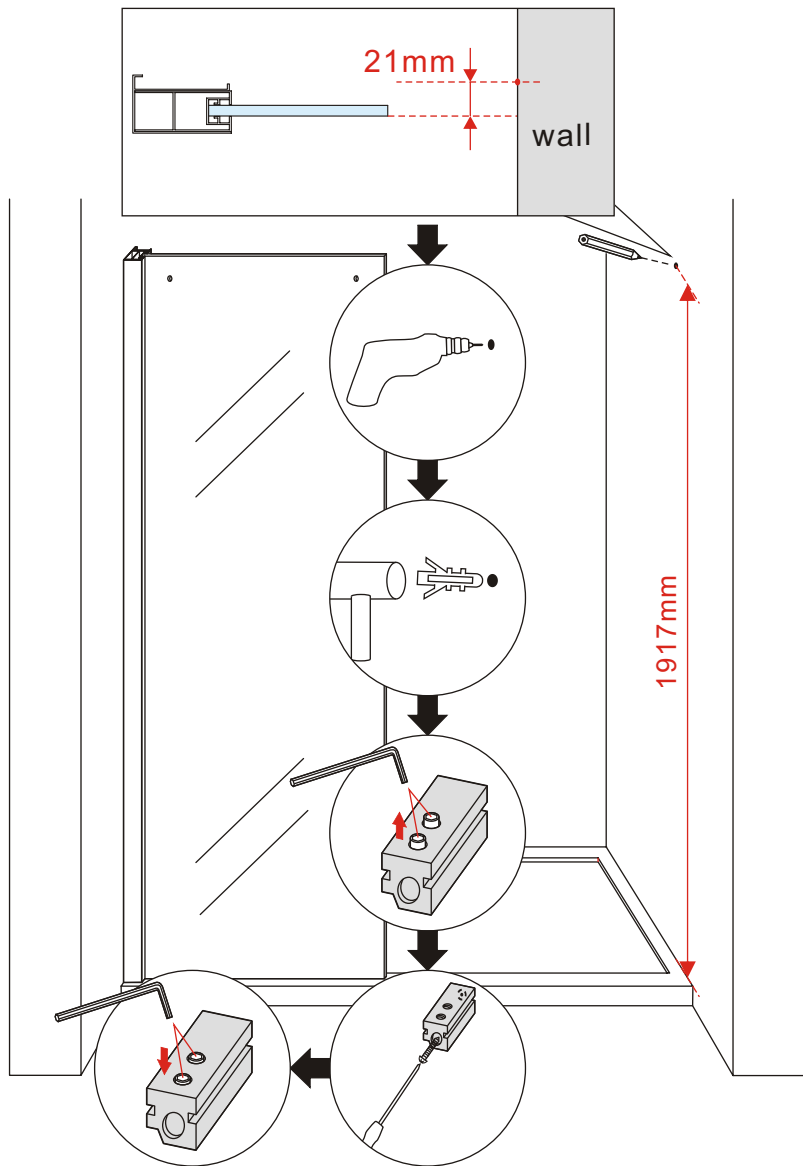



5

Install the Guide Rai: First of all put the first buffer into the guide rail and fixed it by screwdriver, next put two wheels into the guide rails then put the second buffer into guide rail and fixed by screwdriver then insert the guide rail into guide rail connect support, thirdly fixed the guide rail and glass by glass screw. finally fixed the guide rail and guide rail connect support by hexagon.

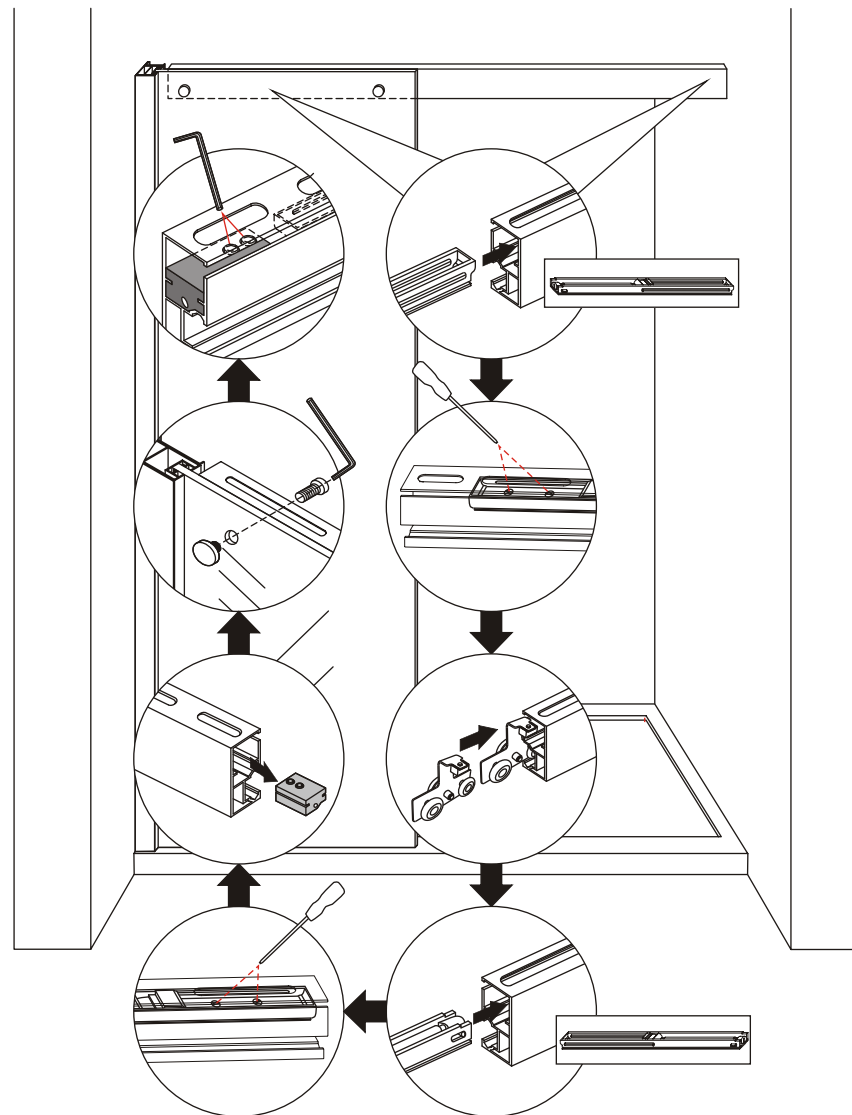



6

Install aluminum water-proof bar on the tray and fixed the plastic part.

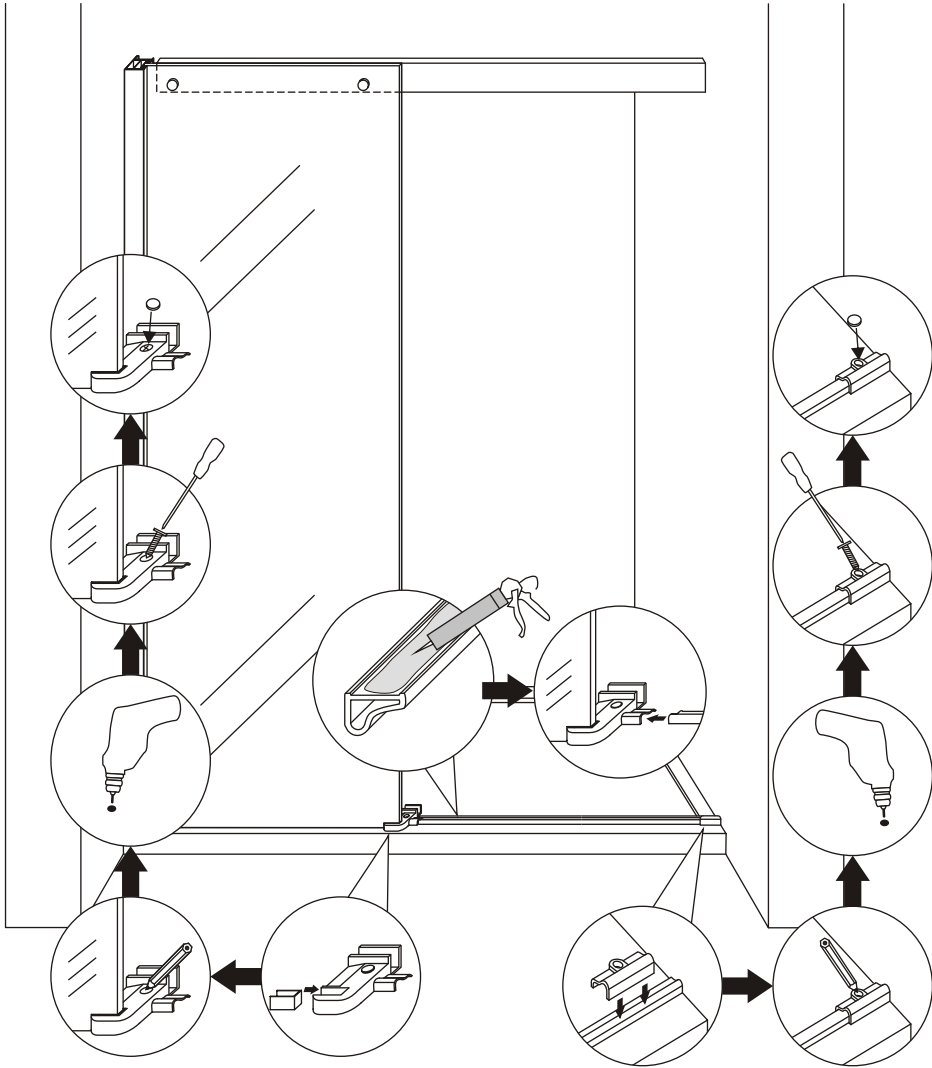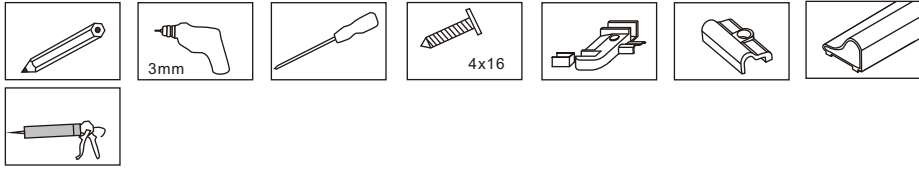



7

In stall the door glass to the guide rail wheels by hexagon

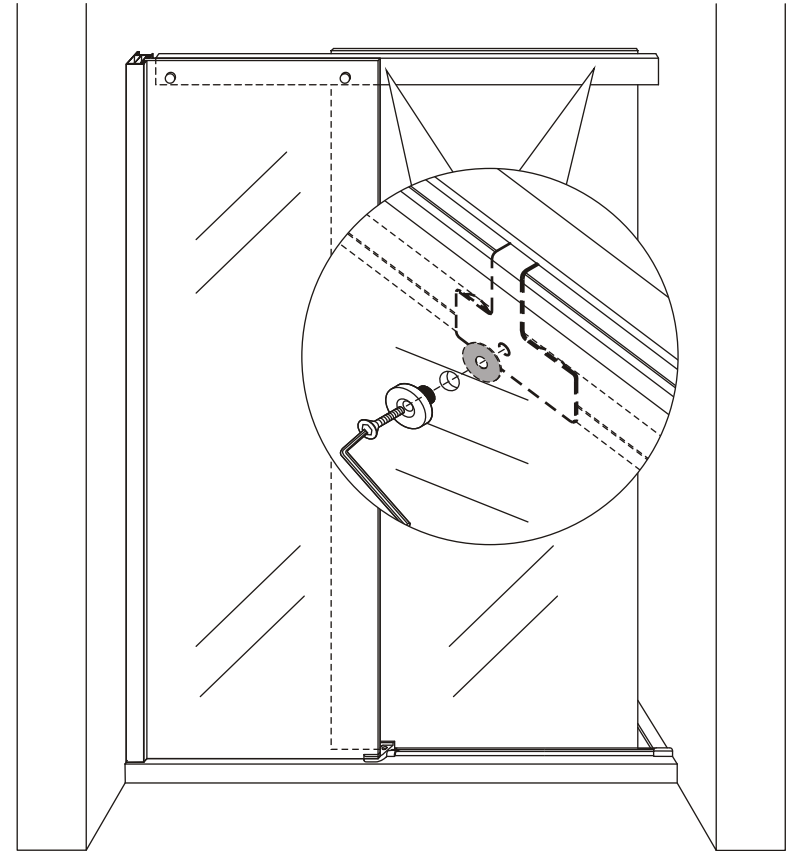

8

1. Install the water-proof gasket.
2. Install the handle.
3. Install the guide decorate part.

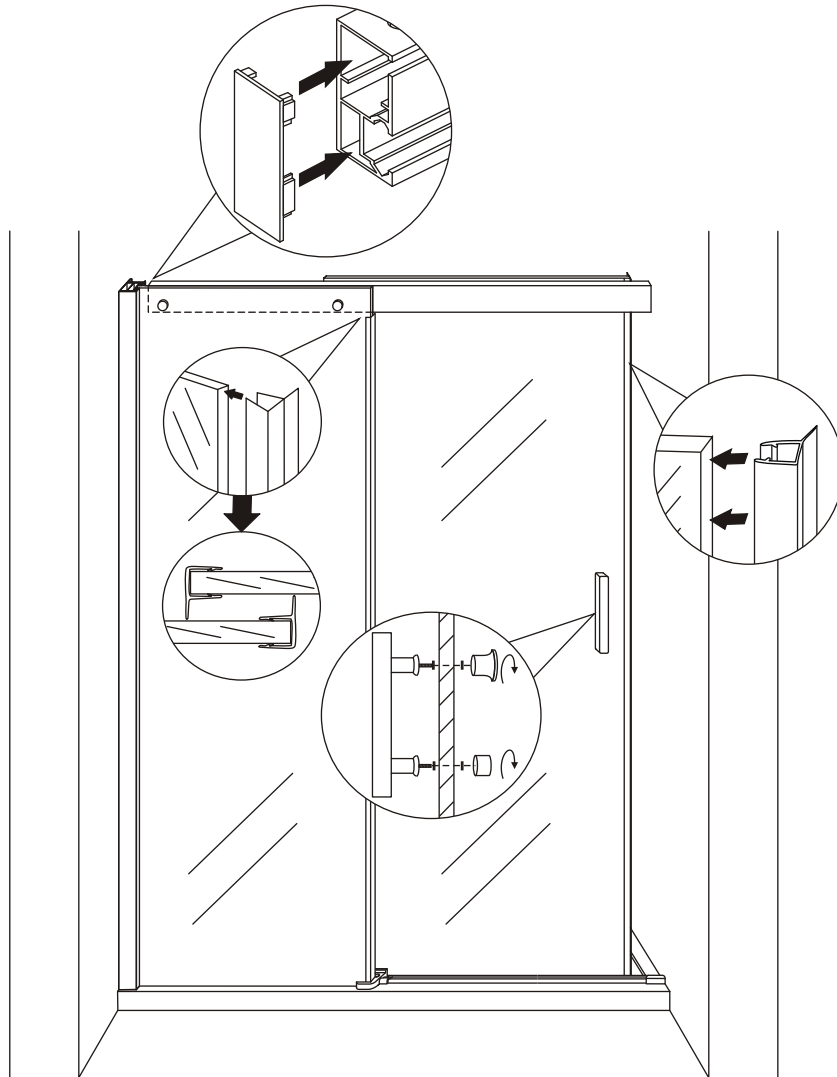

1. Tighten the screws (five screws at the wall profile) , Put the cover on. Install the aluminium decoration.
2. Use silicon to seal the gap between aluminum track and shower tray.

Attention: Do not use any corrosion liquid to clean the aluminum and other metal parts when daily maintenance.

